




KITSCH-NITSCH[®]

application instructions

APPAREL VINYL

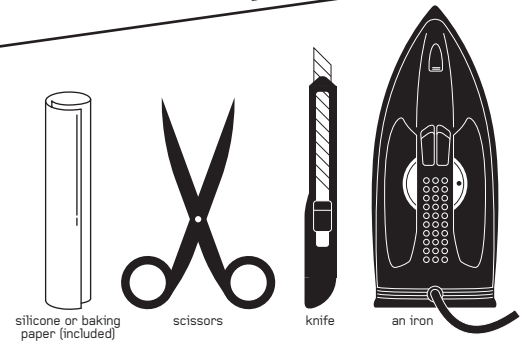


silicone or baking paper (included)


scissors

knife

an iron

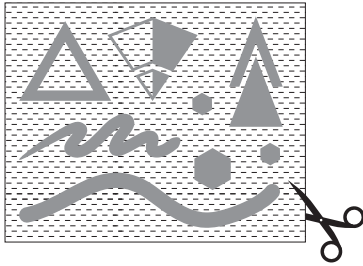


1 Cut the set to individual elements (if necessary).

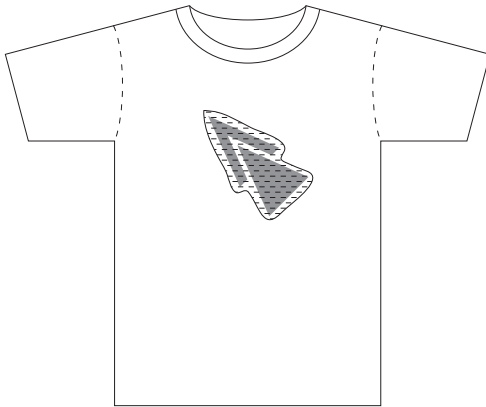


2 Place your t-shirt face up on a clean hard flat surface, ensure its sitting flat and without creases or wrinkles. Lay the element on top of your t-shirt, with the shiny plastic transfer film upwards.



3 Once transfer is correctly positioned, lay the silicone (baking) paper overtop of the transfer and t-shirt – this will stop the transfer or t-shirt getting burnt when you use the hot iron to apply.

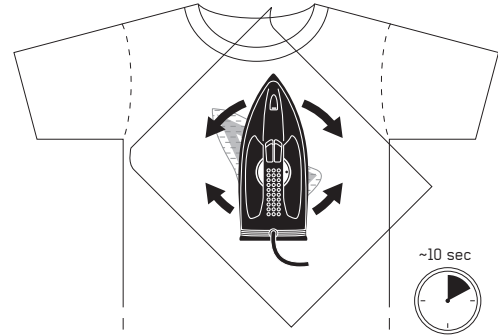

4 Heat iron to maximum temperature (175°C). Ensure the steam setting is off and that there is no water in the iron. Iron over the element and transfer in a small swirling motion for about 10 - 12 seconds.

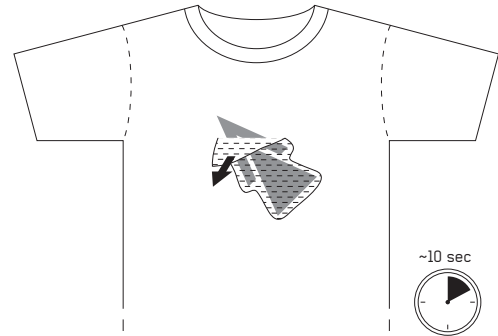

5 Remove the silicone paper: Let it cool for another 10 seconds then remove the transfer film by pulling over on itself. Do this slowly and steadily.



4 Repeat steps 1 - 5 until your artwork is finished.

APPAREL VINYL CAN BE APPLIED TO COTTON OR PREDOMINATELY COTTON MIXTURE FABRICS. FOR BEST RESULTS USE NON-STRETCHING FABRICS. MACHINE WASH COLD (30°C), IRON INSIDE OUT.
Apparel vinyl is durable. If the edges of elements peel off due to improper application or long-term use, iron them on again following steps 3 & 4, but iron for 3 - 4 seconds only.

